

MODULARM ACCESSORIES

Products for Expanding System Capabilities

REMOTE NOTIFICATION

Modularm offers audible and visual on-premise alarms and also provide remote notifications. Remote notifications and alerts can be added to the 75LC and 75LCT via the 75LC Communicator. Available as wired or wireless (shown).



ILLUMINATED PUSH BUTTON FOR PANIC (ENTRAPMENT) ALARM




IP-1 provides light control, panic, and auto panic inside the compartment. Low voltage pilot light inside the compartment. *DAC-55, DL-35, 75LC, 75LCT*

MD-1

The MD-1™ adds hands free occupancy detection to your walk in. Connected through low voltage wiring to your 75LC multi-monitor™. The MD-1™ will turn on and maintain your lights for the duration of your stay in the walk in using the lighting control feature provided by the 75LC multi-monitor™. Adding the MD-1™ will increase safety by activating hands free Auto-panic™. No reprogramming needed, the 75LC multi-monitor's™ Auto-detect™ will pickup a connected MD-1™ and reprogram itself for the most common settings. The MD-1 comes mounted on a standard 4X2 plate, so installation is simplified.



- **Sensing Range:** 2.5' << 40'.
- **MAX current draw:** 9mA
- **Operating temperature:** (-) 20°F << (+) 122°F
- **Physical Dimensions:** Motion detector 3-1/4" h x 2" w x 1-1/2" d
Mounting plate 4" w x 2" h
Mounting box 4" w x 2" h x 2-1/2" d

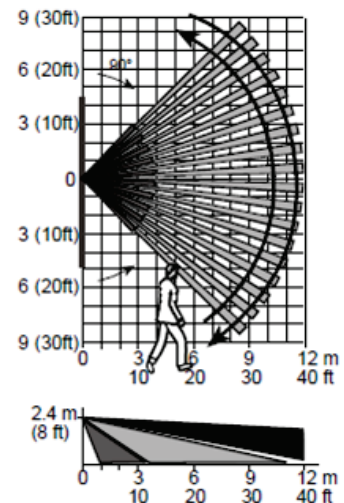

KitchenBrains®
Commercial Kitchen Intelligence

Kitchen Brains
905 Honeyspot Road,
Stratford, CT 06615-7147 USA
Phone: +1-203-377-4414
Sales: 1-800-FASTRON
Fax: +1-203-377-8187
www.KitchenBrains.com

Toll-free technical support
U.S., Canada, and Caribbean:
1-866-840-4271

Europe, Middle East, Africa
31 Saffron Court Southfields Business Park
Basildon, Essex SS15 6SS England
Phone: +44 0 1268 544000

China
1803, 18F, No 922 Hengshan Rd Shanghai
200030, CHINA

Asia Pacific
13A MacKenzie Road 228676
Singapore +65 93801818

This document contains confidential information. The dissemination, publication, copying, or duplication of this document or the software described herein without prior written authorization is strictly prohibited.

